

## 1905 Floor Stand

1. Undo clamp (1) and lower **foot assembly** to the bottom of the **lower stand** as shown. Lock clamp (1). Pull all three feet outward in a star shape. The stand is now free-standing.
2. Take a firm grip of hand clamp (2) and twist anti-clockwise to extend or retract the **upper stand**. Twist the hand clamp clockwise to lock the stand at the correct height.
3. To adjust the angle of the **boom arm**, unscrew clamp (3) and adjust angle as required.
4. To adjust the length of the boom arm back and forth, undo thumb screw (4) and adjust. Retighten as necessary.
5. A ferrule (5) is included to allow fitment of most microphone clamps.


## MICROPHONE CLAMPS ARE SUPPLIED WITH OUR 1918 AND 1808 MICROPHONES.

*The Coomber microphone clamp will attach to the boom arm using the ferrule supplied.*

## 1912 Desk Stand

1. Screw spindle to cast base.
2. Attach microphone clamp.

*Screw finger tight +1/8<sup>th</sup> turn as shown below.*

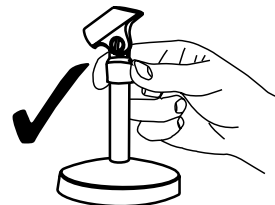


**PLASTIC PARTS WILL BREAK IF FORCED!**



## MICROPHONE CLAMPS ARE SUPPLIED WITH OUR 1918 AND 1808 MICS.

*The Coomber microphone clamp will attach directly to the spindle without the need of a ferrule.*

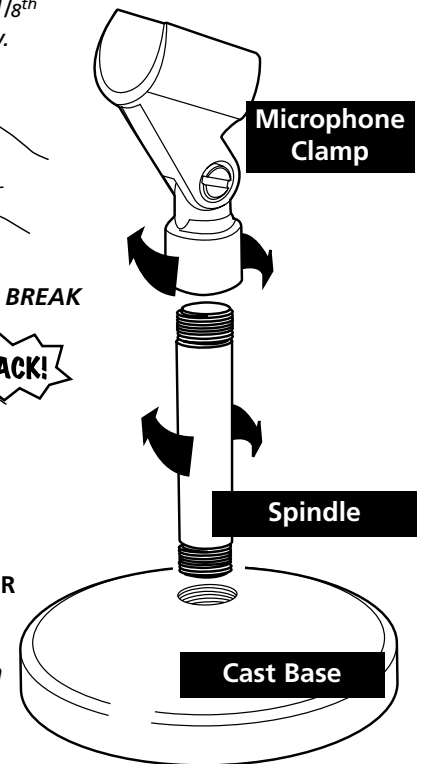

**1912 Desk Stand**



## 1943 Adjustable Jaw Clamp

This handy Coomber accessory can be used with most microphones - including radio mics.

Tel: 01905 25168 Int. Tel. +44 1905 25168  
 Fax: 01905 612701 Int. Fax. +44 1905 612701  
 Email: sales@coomber.co.uk Web: www.coomber.co.uk

We reserve the right to make changes deemed necessary without prior notification.

Coomber Electronic Equipment Ltd.  
 Croft Walk  
 Worcester  
 WR1 3NZ  
 U.K.