

The CD Player software initially takes a few moments to run a diagnostic check when first started. Please expect a few seconds delay before the CD controls function.

The On/Mains LED glows red when the mains supply is on. The 2015 will not operate until the On/Off button is pressed and the LED glows yellow.

PLEASE NOTE: ALWAYS CLOSE THE CD TRAY (1) WITH THE UNIT SWITCHED ON. PUSHING THE TRAY CLOSED WITH THE POWER OFF MAY LEAD TO DAMAGE DURING SUBSEQUENT TRANSPORTATION.

Power from Mains (Model 2015, 2015/R)

When connected to the Mains, the indicator (6) will glow red. Press POWER button (5) IN to power equipment - the indicator (6) will glow yellow. The LCD display (16) will also be backlit.

Power from Rechargeable Battery (Model 2015/R only)

The rechargeable battery charges automatically when the Mains is connected - even if the POWER button (5) is OUT. It cannot be overcharged. To operate the 2015/R using the rechargeable battery, press POWER button (5) IN. The indicator (6) will glow green.

- The rate at which the battery discharges varies - depending upon its original charged state, volume and frequency of use.
- The green indicator (6) will flash when the battery is low. Recharge the battery for approximately 6 to 8 hours to fully recharge it.
- **WARNING:** completely exhausting the battery will damage it permanently. Recharge when the green indicator (6) flashes rapidly.
- All rechargeable batteries have a **finite recharge/discharge** life (they do not last forever). On average, the number of **recharge/discharge cycles** is 250 times from new, though this will **reduce** with heavy usage.

Headphone Sockets (8 & 11)

Connecting Mono or Stereo headphones to the MASTER headphone socket (8) automatically disconnects the internal loudspeakers.

Up to five more pairs of headphones may be connected to Sockets (11).

Note: For safety you are advised to use only 600 ohm headphones such as Coomber 1929 headphones.

EXT D.C. Input Socket (7)

A standard Roka connector allows the 2015 to operate from an external 12V DC supply. Please observe the correct polarity - shown below the D.C. Input Socket (7). Disconnect the DC supply when not in use.

Suitable batteries include 12V car batteries (directly connected or via an auxiliary socket such as the cigar lighter) or a Coomber 1959 rechargeable battery (which must be recharged using our 1958 charger).

Balance Control (9)

The balance control (9) allows fading between the speakers. Maximum output of both speakers is achieved when the dial is set to the centre point.

When turned fully left, the right hand speaker cuts out completely and vice versa - ideal where music is recorded on one track and voices on the other.

Volume control (10)

To protect listeners, always adjust the volume control (10) to minimum before playing a CD - **particularly if headphones are being used**. Turn the volume level up once the CD is playing.

If necessary restart the CD once the volume level is set.

OPEN/CLOSE button (4)

Press the OPEN/CLOSE button (4) to open or close the CD loading tray (1).

Insert the CD with the label side facing up.

Notes: The CD tray is spring mounted to improve playback performance. It is perfectly normal for the loading tray to wobble when touched.

The loading tray can be closed by using one of the following methods:-

 
Lightly pushing the front of the CD tray inwards.

Pressing the PLAY/PAUSE button (3)

Pressing the PLAY/PAUSE button on the remote control unit.

Pressing the OPEN/CLOSE button (4)

Using the PLAY/PAUSE buttons to load the disc will automatically allow any audio CD in the tray to start playing.




PLAY/PAUSE button (3)

Press the PLAY/PAUSE button (3) once to start playing a CD.

To pause a CD, press the PLAY/PAUSE button (3).

To resume playback, press PLAY/PAUSE button (3) again.

 Note: While in PAUSE mode, the word 'PLAY' will flash on and off in the LCD display.





F.SKIP/FF (12) and B.SKIP/REW buttons (13)

Press the F.SKIP/FF button (12) to move to the next track.

Press the B.SKIP/REW button (13) to return to the start of the track.


Press the button again to go back to the previous track.

  TIP: Press and hold the F.SKIP/FF or B.SKIP/REW buttons down to search forwards or backwards through the track at high speed (i.e. cue and review)



STOP button (2)

 Pressing STOP (2) will cause the CD to stop playing. The CD player will return to the READY MODE.



Remote Control Sensor (17)

The 2015 is supplied with a remote control unit. The CD player incorporates an infra red sensor mounted on the front panel.

The controls of the remote control are the same as those on the CD player (described above and overleaf) and operate in the same way.

To use the remote control, press the buttons required while pointing it at the front face of the CD player.

LCD Display (16) Information



Standby Mode **No disc inserted**



Ready Mode **Disc inserted**
Number of tracks on the CD is displayed



Disc Playing **'PLAY'** appears
Track 1 currently playing



 
Disc Paused **'PLAY'** flashes on and off
Track 1 currently paused



Error Warning **Disc Problem**
Check to ensure that disc has been inserted correctly. Has an audio disc been inserted?

Repeat Mode

Depressing the REPEAT button once allows the track currently playing to be repeated when it has ended.



Repeat Mode **'PLAY'** and **'REPEAT'** appear
Track 3 will play again when it ends.



Depressing the REPEAT button a second time allows the whole CD currently playing to be repeated when it has ended.

 
All Repeat Mode **'PLAY', 'ALL' and 'REPEAT'** appear
The entire CD will play again when it ends.



Press REPEAT again to cancel the REPEAT/ALL REPEAT modes.

Program Mode

The CD Player can be programmed to play a selection of tracks in any order - from any audio CD inserted in the loading tray.



Note: Program mode will only work with the currently inserted disc. It will not remember a selection once the disc has been removed.

Example: tracks 3, 8 and 2 are selected using the process shown below.

Press PROG once.  **The word 'PROG' and 00 flash on and off**

Press F.SKIP/FF to select track 3.  **The word 'PROG' and 03 flash on and off**

Press PROG again  **The word 'PROG' and 00 flash on and off**

Press F.SKIP/FF to select track 8.  **The word 'PROG' and 08 flash on and off**

Press PROG again  **The word 'PROG' and 00 flash on and off**

Press F.SKIP/FF to select track 2.  **The word 'PROG' and 02 flash on and off**

Press PROG again. Programming is now complete.

Press PLAY to begin playing the selection.



In PLAY Mode **'PLAY'** and **'PROG'** appear
The first programmed track plays.

Note: While in this mode, the B.SKIP/REW and F.SKIP/FF buttons will only select the programmed tracks.

Press STOP to exit from PROG PLAY. Press PLAY to listen to the CD in the normal way or, press PROG and PLAY to repeat the program again.

Cancelling the Programmed Play List

Press PROG and STOP to clear the programmed play list from the CD player memory.

Removing the CD will also clear the programmed play list.

SAFETY & GENERAL INFORMATION

WARNING: This equipment is fitted with a LASER diode which can harm the eyes. Do not attempt to disassemble the casing or use any part of the contents for any purpose other than its intended use.

Headphones: For personal safety and comfort connect headphones into equipment, turn volume down and then switch on **before** placing headphones over ears. For safety use only 600 ohm headphones (i.e. Coomber type 1929).

Environments: The equipment should not be exposed to dust, moisture, water, chlorine and other corrosive substances in normal use or during storage. It will cause damage to this equipment.

Swimming pool atmospheres: are very hostile to all electro-mechanical equipment (e.g. steel rusts and rubber perishes). Equipment returned for repairs showing evidence of use in adverse environments may, at our discretion, be charged for even during the 12 month warranty period.

- Rechargeable battery replacement must be carried out by a competent qualified technician.
- The disposal of batteries (rechargeable or otherwise) where used in Coomber equipment should be discarded in accordance with local regulations.
- Do not cover the ventilation openings with any items (e.g. newspaper, fabrics etc.).
- Naked flames, such as lighted candles, should not be placed on or near the apparatus.
- The apparatus should not be exposed to dripping or splashing. No objects filled with liquids, such as vases, should be placed on or near the apparatus.

European Safety Standard: All Coomber equipment complies with EN60065. Any local requirements for use of this equipment should be taken into account.

Coomber Electronic Equipment Ltd.

Croft Walk, Worcester, WR1 3NZ, U.K.

Tel: 0044 (0)1905 25168

Fax: 0044 (0)1905 612701

e-mail: sales@coomber.co.uk

web: www.coomber.co.uk

Class I construction: This equipment must be EARTHED.

Mains Voltage

UK & EEC: 220-240V 50Hz: **Mains Cable:** Line - Brown, Neutral - Blue, Earth - Yellow & Green
USA: 110-120V 60Hz: **Mains Cable:** Line - Black, Neutral - White, Earth - Green

Disconnect from mains supply when not in use.

Mains Plug: The mains cable fitted to this equipment is already provided with a moulded plug. If another plug type is required, follow instructions from the plug manufacturer, or seek advice from a qualified person. **DISPOSE OF ORIGINAL PLUG SAFELY. DO NOT RE-USE.**

Mains Plug fuse rating: 3Amp to BS1362 (applicable in UK)

Model type and rating information is located on a label on the rear of the product.

Additional Technical Information: If you require any further help or information, or if any point is not clear, then please telephone 01905 25168/9 quoting your model number and serial number (located on a label on the rear of the product). Our Technical Department will be pleased to help you.

Note: This equipment contains no user serviceable parts and should only be dismantled by competent qualified personnel. **Dismantling will render the warranty void.**

Electrical Safety Testing: Safety testing and servicing should only be carried out by competent qualified personnel. When undertaking an earth bond safety test, only use the mains module chassis/metalwork as other exposed metal surfaces not 25Amp earth bonded will cause internal damage. **If the supply cable is damaged the equipment should be returned to Coomber or their agent for cable replacement.**

- Coomber reserve the right to change products and specifications without notice.

- All Coomber equipment is covered by a 12 months warranty against defective components or faulty manufacture from date

of dispatch. Any modifications to or misuse of the equipment renders this warranty void.

- Equipment that is security marked or damaged cannot under any circumstances be exchanged.