


Supplementary Instruction: "Fixing" CDs

Coomber

All 'Real Time' Recorder models


We often get asked how to fix a CD for playback on an ordinary CD player.

The answer is to always eject your CD from the drive using the appropriate eject button as shown below.

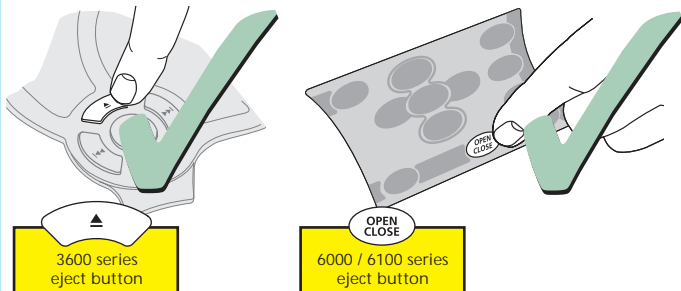

DO NOT USE THE DRIVE BUTTON TO EJECT A CD.

Otherwise, you will NOT be given the option to "fix" the CD.

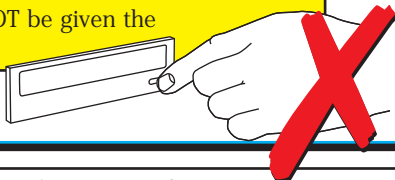

When ejecting a recordable CD-R or CD-RW using the appropriate eject button the screen will display a message (shown right).



Select "**Fix**" so that the CD can be played on most conventional CD players.

Select "**Eject**" to remove the CD without fixing. You will not be able to play the CD in conventional CD players, but you can add tracks to the CD at a later date.

You can keep adding tracks until:-

- you have recorded 99 tracks
- filled the CD (around 80 minutes) or;
- you fix the disc on ejection.

CD-RW discs can be fixed for playback on conventional CD players. They can then be erased for future recording.

Coomber Electronic Equipment Ltd.
Brindley Road, Warndon, Worcester, WR4 9FB, U.K.

Tel: 0044 (0)1905 342070
Fax: 0044 (0)1905 759170

e-mail: sales@coomber.co.uk
web: www.coomber.co.uk

GH INSTR 6100/3600 FIXING v1.0 02/12/2009

© Coomber Electronic Equipment Ltd. 2009 v1.0 first published 2009